




# Nikon Coolpix L330 Front Housing Replacement

Use this guide to replace the front housing of a Nikon Coolpix L330.

Written By: Rajeev

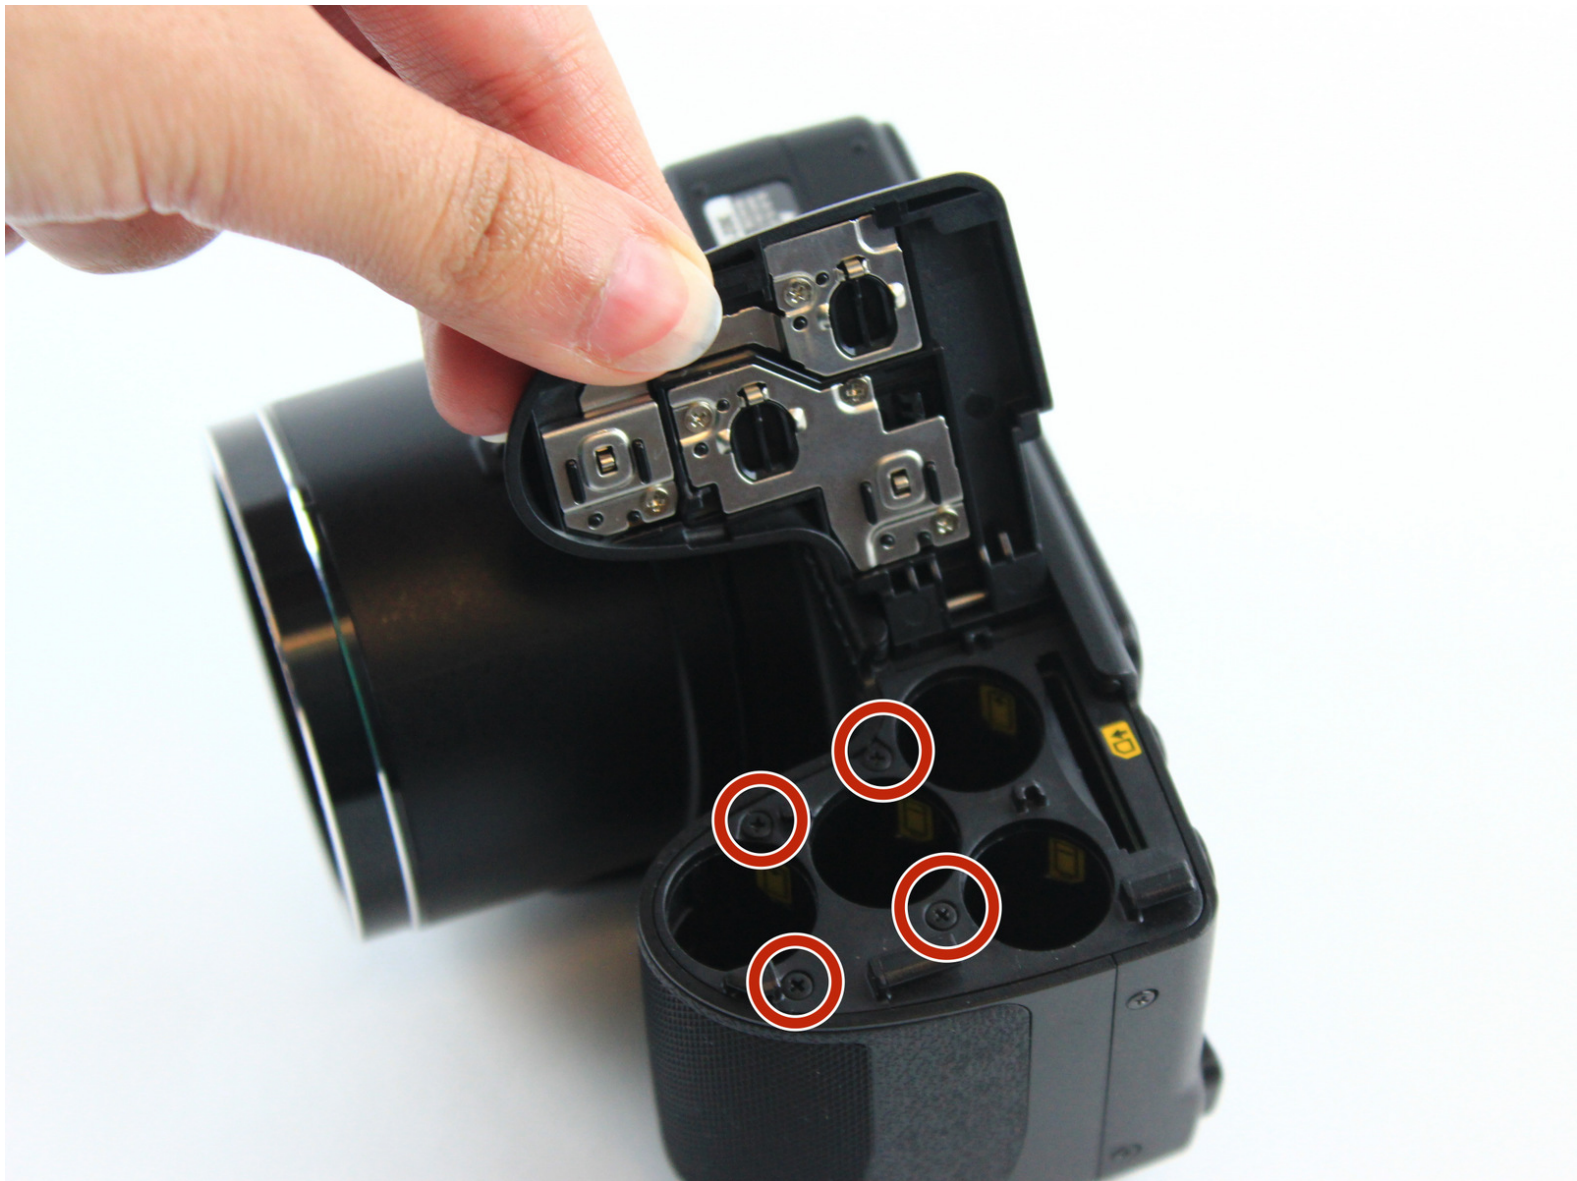

## INTRODUCTION

This guide gives a step by step procedure to remove the front housing for internal repairs.

---

### TOOLS:


- [Metal Spudger](#) (1)
  - [Phillips #000 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
  - [Screwdriver](#) (1)
-

## Step 1 — Back Housing




- There are six screws attaching the back housing to the camera. Remove the screws from the body with a PH000 screw head.
  - Two 1.5x2.5mm screws on the right side.
  - Two 1.5x2.5mm screws on the underside.
  - Two 1.5x2.5mm screw on the left side.

## Step 2

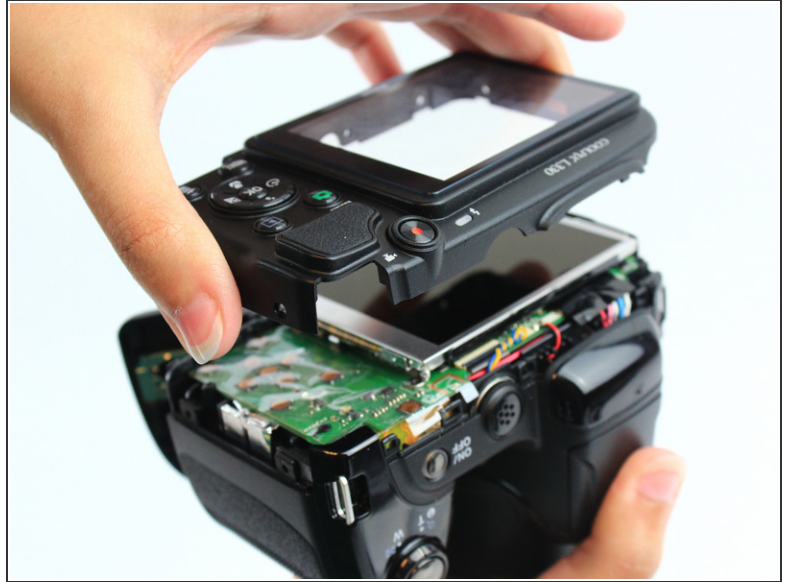

- After removing the screws, use a metal spudger or plastic opening tool to push the back cover out.

 The metal spudger can damage the plastic housing, so use caution when applying any pressure to it. Use a plastic opening tool to reduce the risk of damage to the housing.

- Remove the back housing of the camera by lifting it directly up.

 The back cover may be slightly tight, therefore more force may be needed to lift it up.



## Step 3 — Front Housing



- Remove the four 1.5x2.5mm screws in the battery housing using a PH000 screw head.

## Step 4




- Remove the two 1.5x2.5mm screws below the flash unit using a PH000 screw head.

## Step 5



- Remove the black tape covering the electrical connections.
  - Remove the 1.5x2.5mm screw using a PH000 screw head.
  - Desolder the six marked wires.
- i** The screen has been removed as well as the back-plate in this step, however they need not be removed to replace the front housing.


## Step 6

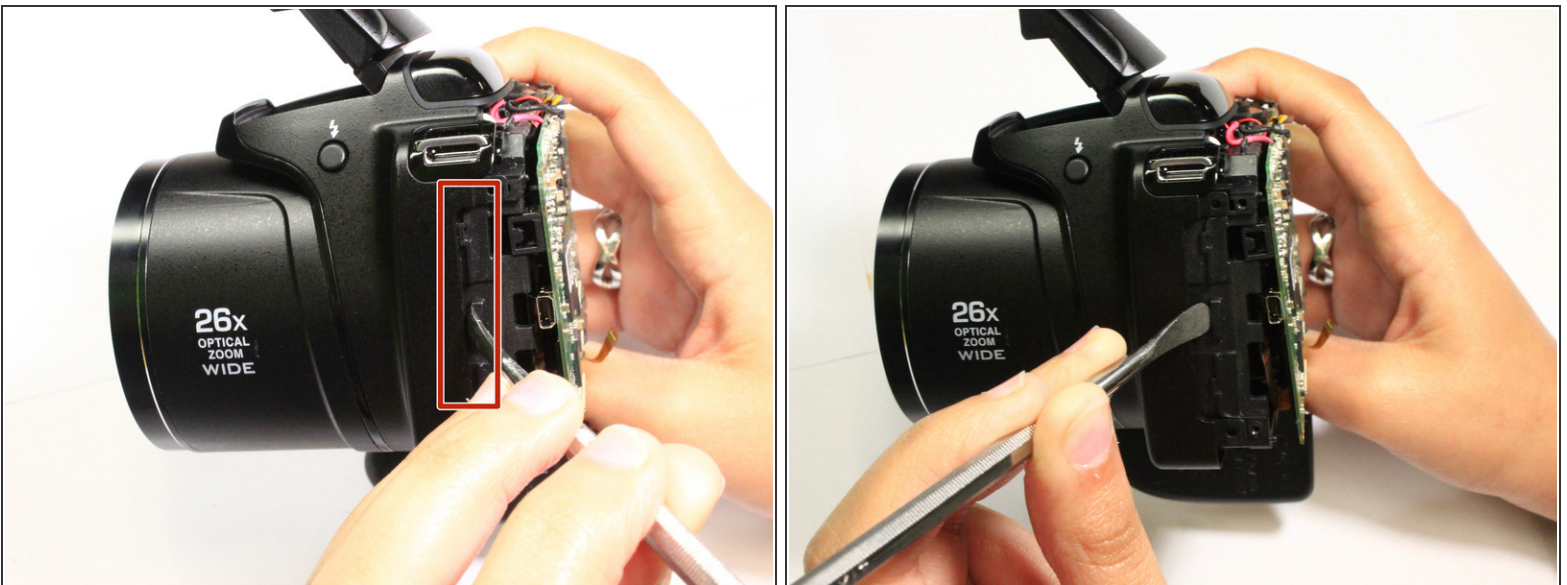

- Insert a plastic opening tool between the front housing and inner frame.
- Lever the tool to slide the front housing forward.



## Step 7

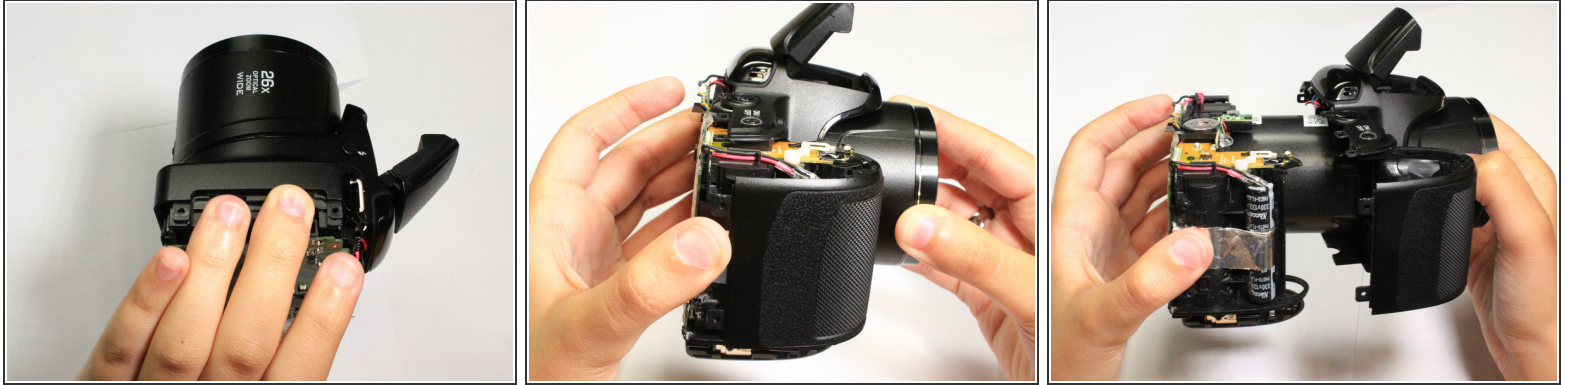

- Position the fingers of one hand on the inner frame and the other hand around the lens barrel.
- Pull the front housing away from the inner frame.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-21 09:28:26 AM.